

# BRAKE VALVE

TYPE TC-6

CATALOG  
03-K-05B

The TC-6 Trailer Control Brake Valve is normally used to operate the trailer brakes independently of the tractor brakes. It may be used, however, wherever a hand-controlled pressure graduation function is desired.

The TC-6 is not designed for use as a parking brake control and should never be used to hold the brakes applied with vehicle unattended.


For complete service/maintenance information, see Service Data Sheet SD-03-18.

Maintenance Kit is Pc. No. 289890.




Weight - 1 Lb.

VMRS #13-010-014

Device Code - 3086

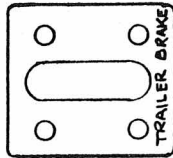

Dial Plate  
Pc. No. 294294

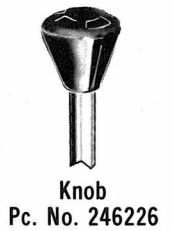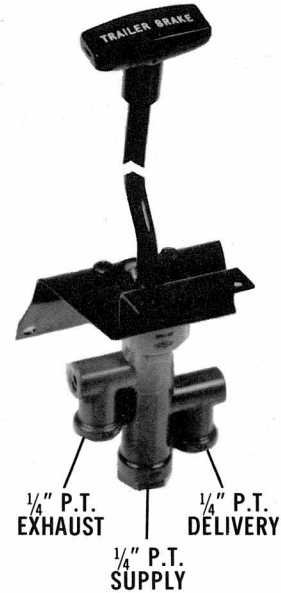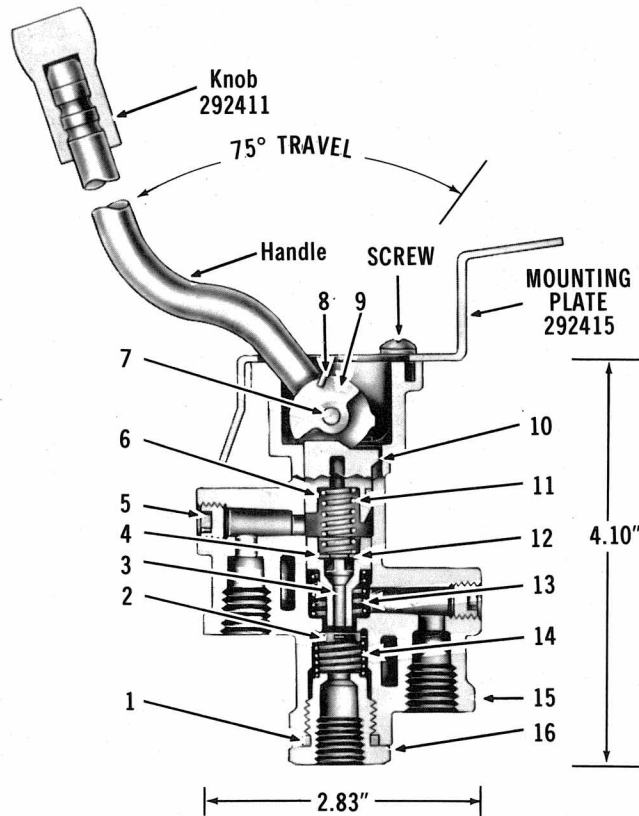

### SUB ASSY AND DETAIL REFERENCE

TC-6 BRAKE VALVE PC. NO.	SERVICE REPLACEMENT PC. NO.	CUSTOMER IDENTIFICATION	NOB PC. NO.	HANDLE PC. NO.	MOUNTING OR DIAL PLATE PC. NO.	SCREW (4 REQD.) PC. NO.
101786	101786	NONE	292411	292412	NONE	NONE
102155	102155	NONE	246226	294295	294294	292275
289060	101786	D9HT-2A747-AA FORD	292411	292412	292415	291425

### COMMON SERVICE PARTS

NO.	PC. NO.	QUAN.	DESCRIPTION	NO.	PC. NO.	QUAN.	DESCRIPTION
1	A	1	O-RING	9	292413	1	ROLLER CAM
2	A	1	VALVE	10	292416	1	CAM FOLLOWER
3	292419	1	PLUNGER	11	292417	1	GRADUATING SPRING
4	A	1	O-RING	12	292664	1	SPECIAL WASHER
5	248397	2	PIPE PLUG, 1/8"	13	292420	1	RETURN SPRING
6	A	1	O-RING	14	A	1	INLET VALVE SPRING
7	292414	1	PIVOT PIN	15	293053	1	BODY
8	A	1	TORSION SPRING	16	292424	1	CAP

A - AVAILABLE IN MAINTENANCE KIT PC. NO. 289890.